Kinter-T2

Operation Instructions

Dear Customer:

The Kinter T2 stereo karaoke amplifier will enable you to satisfy your high demands on sound. The amplifier is characterized by low operating current, rapid switching capabilities and excellent temperature stability. Experience and enjoy how this high-tech machine perfectly reproduces magnificent sound.

The Kinter T2 Mixing Amplifier is the best value you can find for a great karaoke mixing amplifier. TONGHENG engineers has put their years of professional experience in designing this low cost yet powerful mixing amplifier.Please read carefully before using the manual.

Function

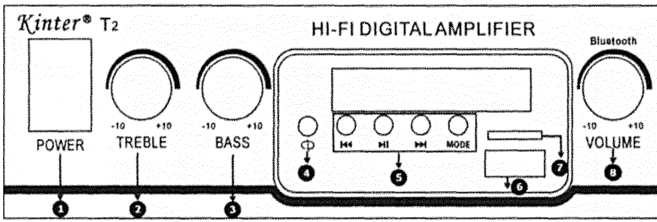

1: POWER

2: TREBLE.....High adjustment

3: BASS.....Bass adjustment

4: REPEAT.....Repeat one/all

5: Mode conversion four seat button (can add BT function)

6: USB.....Insert the u disk

7: TF CARD.....Insert the card

8: VOLUME.....Volume adjustment

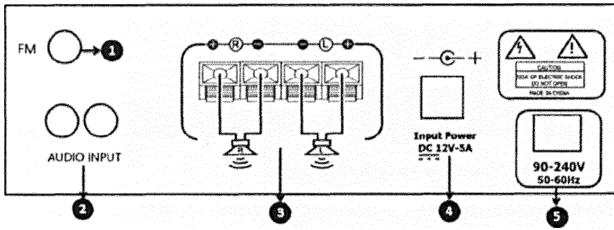

1: FM.....The radio antenna

2: AUDIO INPUT.....External audio input

3: SPEAKER OUTPUT.....External speakers

4: DC12V.....DC 12 input or battery input

5: 90-240V / 50-60Hz.....Power input

Technical data:

1. **RMS Power @ 4 Ohm: 36W**
2. **THD @ 4 Ohm: <0.25%**
3. **Frequency response: 20Hz ~ 20KHz ± 1dB**
4. **Input sensitivity LOW LEVEL INPUT: 0.25~2V**
5. **S/N ratio (+A): >85 dB**
6. **Stereo separation (+A): >80 Db**
7. **Power requirements: DC 12V /90-240V (50-60HZ)**
8. **Repeat Control**

Security guidance:

1. Be sure to read carefully and keep this manual.
2. Please keep in sealing completely and packing sound when storage and transportation.
3. Before using, put the machine on a solid surface.
4. Openings seam slot is for airing, avoid case of overheating in parts, Do not cover or jam.
5. before Connecting the power, please make sure the power supply voltage value is DC 12V.
6. connecting DC12V POWER supply, the LED display bright (POWER), indicating that the machine turn on thePOWER,please shut off (POWER) when shutdown.
7. Please protect the power cord, ensure it won't be trampled or other may lead to appear suddenly loses power of accidents, And don't piled up any object on the power line.
8. Please pay attention to the manual mentioned all attention and warnings.
9. Shall not take any liquid into the machine sewing, otherwise, it will have a serious damage or leakage.
10. Do not have any changes or amendment to this equipment. If the equipment have any abnormalities, please look for professional handling.
11. Please don't take this device in or stored in environmental which the temperature is more than 60 degrees Celsius, otherwise, it will cause damage to equipment.

Power supply

Rated input dc voltage	DC12V
Rated input dc current	55A
Input voltage rating	90-240V / 50-60HZ
Rated ac current/power Input	0.3A/66W

Environment

temperature	operation	18~45℃
	storage	-2~60 ºC
temperature	operation	10~80%. without gel
	storage	10~85%. without gel
Operating conditions		Ordinary office or home environment. Avoid excessive dust. Avoid direct sunlight or work near the place which Is in light.

Remote control

1.Player mode selection.

2.Back/REW,Under U disk or TF card player state,press the key to switch to previous program,hold the key for over 2 seconds to select program quickly backward,the player may staring from current program quickly select program and 1 program may be searched every 0.2second.

3.Next/FF Under U disk or TF card playing state, press the key to switch to Next program;hold the key for over 2 seconds to select program quickly forward;the player may starting from current program quickly select program and 1 program may be searched every 0.2 second.

4.Under TF card playing state,insert the U disk,the player automatically switches to U disk playing state Under U disk playing state,insert the TF card, the player automatically switches to TF card playing state.

5.Press the key to increase the volume.

6. Press the key to drop the volume.

7.Press the key to choose a variety of music effect.